



---

## LLD CPHS Interface

---

Project	G23-GSM Protocol Stack
Document Type	Technical Documentation
Title	LLD CPHS Interface
Author	Marc Droste-Franke
Creation Date	24 October, 2002
Last Modified	25 July, 2005
ID and Version	8462.730.02.006
Status	Being Processed

Copyright © 2002-2003 Texas Instruments, Inc. All rights reserved.

**Texas Instruments Proprietary Information – Strictly Private**

## 0 Document Control

© Copyright Texas Instruments, Inc. 2002-2003  
All rights reserved.

Every effort has been made to ensure that the information contained in this document is accurate at the time of printing. However, the software described in this document is subject to continuous development and improvement. Texas Instruments reserves the right to change the specification of the software. Information in this document is subject to change without notice and does not represent a commitment on the part of Texas Instruments. Texas Instruments accepts no liability for any loss or damage arising from the use of any information contained in this document.

The software described in this document is furnished under a license agreement and may be used or copied only in accordance with the terms of the agreement. It is an offence to copy the software in any way except as specifically set out in the agreement. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Texas Instruments.

### 0.1 Document History

ID	Author	Date	Status
8462.730.02.002	CLB	29 October, 2002	Creation
8462.730.02.002	CLB	11 November, 2002	Being Processed
8462.730.02.002	KGT	11 December, 2002	Being Processed
8462.730.02.002	KGT	21 January, 2003	Being Processed
8462.730.02.003	TLU	15 April, 2003	Being Processed
8462.730.02.004	TLU	30 April, 2003	Being Processed
8462.730.02.005	MDF	13 September, 2004	Being Processed
8462.730.02.006	AJS	25 July, 2005	Being Processed

### 0.2 References, Abbreviations, Terms

[TI 7010.801] 7010.801, References and Vocabulary, Texas Instruments.

## Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
<b>2</b>	<b>Overview .....</b>	<b>5</b>
2.1	General .....	5
2.2	Functionality .....	5
2.3	Architecture.....	6
<b>3</b>	<b>Interface Description .....</b>	<b>7</b>
3.1	Basic Principle .....	7
3.2	CHANGES .....	7
3.3	General Data Types .....	7
3.3.1	T_CPHS_RET .....	7
3.3.2	T_CPHS_LINES.....	8
3.3.3	T_CPHS_CB .....	8
3.3.4	T_CPHS_PARAMS .....	9
3.3.5	T_CPHS_USER_CB .....	9
3.4	General Functions .....	9
3.4.1	cphs_check_status.....	9
3.4.2	cphs_line_makes_sense .....	9
3.5	START/END/REFRESH CPHS MODULE .....	10
3.5.1	ACI/CPHS Module functional interface .....	10
3.5.1.1	cphs_start.....	10
3.5.1.2	cphs_refresh_data .....	10
3.5.1.3	cphs_stop.....	10
3.5.2	AT command .....	11
3.5.2.1	AT%CPHS .....	11
3.5.3	ACI/MFW functional interface .....	11
3.5.3.1	Data types.....	11
3.5.4	T_ACI_CPHS_INIT .....	11
3.5.4.1	sAT_PercentCPHS .....	12
3.5.4.2	qAT_PercentCPHS .....	12
3.5.5	MSC .....	13
3.6	NETWORK OPERATOR NAME .....	15
3.6.1	ACI/CPHS Module functional interface .....	15
3.6.1.1	cphs_get_opn.....	15
3.6.2	AT command .....	15
3.6.2.1	AT%CPOP.....	15
3.6.3	ACI/MFW functional interface .....	16
3.6.3.1	qAT_PercentCPOP.....	16
3.6.4	MSC .....	17
3.7	HOME COUNTRY ROAMING INDICATOR .....	17
3.7.1	ACI/CPHS Module functional interface .....	17
3.7.1.1	cphs_roaming_ind.....	17
3.7.2	AT command .....	17
3.7.2.1	%CPROAM .....	17
3.7.3	ACI/MFW functional interface .....	18
3.7.3.1	rAT_PercentCPROAM .....	18
3.7.4	MSC .....	18
3.8	VOICE MESSAGE WAITING .....	19
3.8.1	ACI/CPHS Module functional interface .....	19
3.8.1.1.1	cphs_voice_mail_ind .....	19
3.8.1.2	Voice Message Waiting Indicator Setting/Clearing/Reading .....	19
3.8.1.2.1	cphs_set_waiting_flag .....	19
3.8.1.2.2	cphs_get_waiting_flag .....	19
3.8.2	AT command .....	20
3.8.2.1	%CPVWI.....	20
3.8.3	ACI/MFW functional interface .....	21

3.8.3.1	sAT_PercentCPVWI .....	21
3.8.3.2	qAT_PercentCPVWI .....	21
3.8.3.3	rAT_PercentCPVWI .....	21
3.8.4	MSC .....	23
3.9	DIVERTED CALL INDICATOR and CALL FORWARDING FLAG .....	24
3.9.1	ACI/CPHS Module functional interface .....	24
3.9.1.1.1	cphs_set_cfu_flag .....	24
3.9.1.1.2	cphs_get_fwd_flag .....	25
3.9.2	AT command .....	25
3.9.2.1	%CPCFU .....	25
3.9.3	ACI/MFW functional interface .....	26
3.9.3.1	sAT_PercentCPCFU .....	26
3.9.3.2	qAT_PercentCPCFU .....	26
3.9.4	MSC .....	28
3.10	CURRENT LINE INDICATOR and ALS .....	29
3.10.1	ACI/CPHS Module functional interface .....	29
3.10.1.1.1	cphs_get_line .....	29
3.10.2	AT command .....	29
3.10.2.1	%CPALS .....	29
3.10.3	ACI/MFW functional interface .....	30
3.10.3.1	qAT_PercentCPALS .....	30
3.10.4	MSC .....	31
3.11	EMERGENCY CALL 999 .....	31
3.12	CPHS INFORMATION and CUSTOMER SPECIFIC PROFILE .....	31
3.12.1	Data Types .....	31
3.12.2	ACI/CPHS Module functional interface .....	32
3.12.2.1.1	cphs_get_cphs_info .....	32
3.12.2.1.2	cphs_get_csprof .....	32
3.12.3	AT command .....	33
3.12.3.1	%CPINF .....	33
3.12.4	ACI/MFW functional interface .....	33
3.12.4.1	qAT_PercentCPINF .....	33
3.12.5	MSC .....	34
3.13	READ MAILBOX NUMBERS .....	34
3.13.1	Data Types .....	34
3.13.2	ACI/CPHS Module functional interface .....	34
3.13.2.1.1	cphs_read_mb_number .....	34
3.13.2.1.2	cphs_first_free .....	35
3.13.3	AT command .....	35
3.13.3.1	AT%CPMB .....	35
3.13.4	ACI/MFW functional interface .....	36
3.13.4.1	qAT_PercentCPMB .....	36
3.13.5	MSC .....	37
3.14	WRITE MAILBOX NUMBERS .....	37
3.14.1	Data Types .....	37
3.14.2	ACI/CPHS Module functional interface .....	37
3.14.2.1.1	cphs_write_mb_number .....	37
3.14.2.1.2	cphs_get_mb_parameter .....	38
3.14.3	AT command .....	38
3.14.3.1	AT%CPMBW .....	38
3.14.4	ACI/MFW functional interface .....	39
3.14.4.1	sAT_PercentCPMBW .....	39
3.14.4.2	tAT_PercentCPMBW .....	39
3.14.5	MSC .....	40
3.15	INFORMATION NUMBERS .....	41
3.15.1	Data Types .....	41
3.15.2	ACI/CPHS Module functional interface .....	41
3.15.2.1.1	cphs_read_info_nb .....	41

3.15.2.1.2	cphs_explore_info_nbs .....	41
3.15.2.1.3	cphs_info_num_get_max .....	42
3.15.3	AT command .....	42
3.15.3.1	%CPNUMS .....	42
3.15.4	ACI/MFW functional interface .....	43
3.15.4.1	qAT_PercentCPNUMS .....	43
3.15.4.2	sAT_PercentCPNUMS .....	43
3.15.4.3	rAT_PercentCPNUMS .....	44
3.15.5	MSC .....	45

## **1 Introduction**

G23 is a software package implementing Layers 2 and 3 of the ETSI-defined GSM air interface signalling protocol, and as such represents that part of a GSM mobile station's protocol software which is both, platform and manufacturer independent. Therefore, G23 can be viewed as a building block providing standardised functionality through generic interfaces for easy integration.

The G23 suite of products consists of the following items:

- Layers 2 and 3 for speech & short message services,
- Layers 2 and 3 for fax & data services,
- Application Control Interface,
- Slim MMI [02.30] and
- Test and integration support tools.

## **2 Overview**

### **2.1 General**

The CPHS functionality is to be implemented as a separate module of ACI. AT-Interpreter and MFW will access its functionalities by means of an AT-command based interface using some newly defined AT-commands. Another interface also should allow internal communication with ACI. The aim of this document is the description of these two interfaces.

The CPHS module provides the whole functionality described in the document CPHS Phase 2 version 4.2 from 27 February 1997 with the exception of the "Network and Service Provider Lock" section. The latter has indeed already been implemented as an extra module in ACI (see doc 8463.600).


The module caches most of the CPHS SIM values. This allows functions to return immediately and avoids the use of a callback mechanism.

### **2.2 Functionality**

The CPHS library provides the following features:

- Network Operator Name
- Home Country Roaming Indicator
- Voice Message Waiting Indicator
- Diverted Call Indicator
- Current Line Indicator
- Alternate Line Service (ALS)
- Emergency Calling (dialing 999)
- Call Forwarding flag
- Voice message waiting flag
- Customer Service Profile (CSP)
- CPHS Information
- Mailbox Numbers
- Information Numbers

## 2.3 Architecture

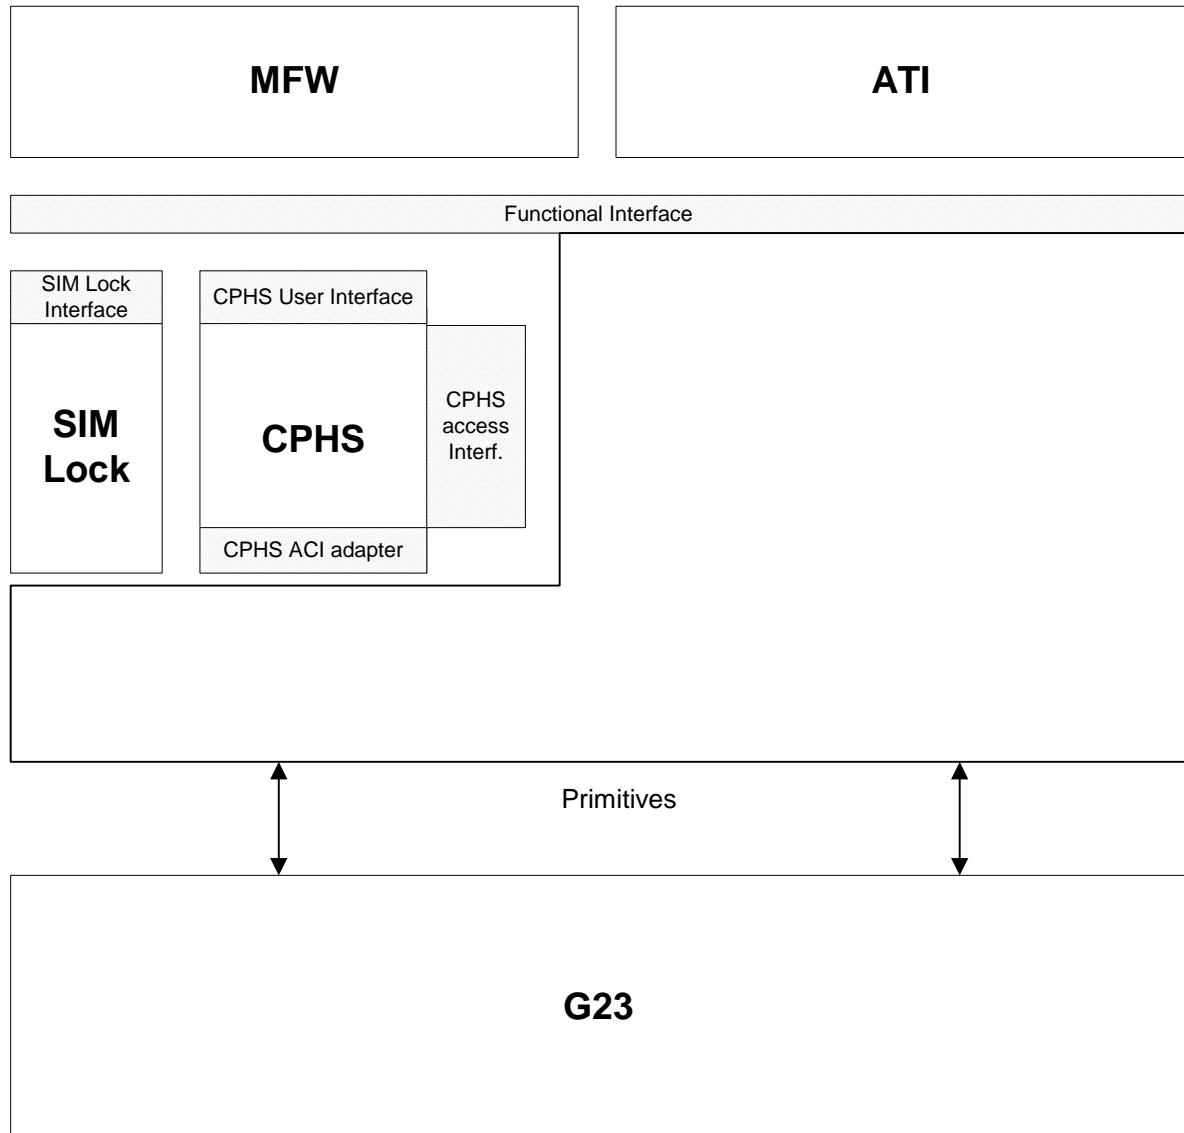



## 3 Interface Description

### 3.1 Basic Principle

The CPHS functionality is implemented in a separated module of ACI. To ensure the independence of this module, three interfaces are here defined.

The first one is a so-called *user interface*. This interface will be used by any application willing to use CPHS functionality. In the current application, this interface is used by the Command Handler part of ACI. Some operations may be asynchronous (message sent to lower entity such as SIM: stack returns before having the answer). In such cases, the CPHS module will use a callback previously passed by ACI during initialisation phase.

The CPHS module needs also a so-called *access interface* so that the protocol stack (through ACI) may exchange information with it. This interface may be used by the Command Handler or the Protocol Stack Adapter.

In some cases, the CPHS module will also have to use some ACI features, such as accessing data on the SIM. The CPHS module should as much as possible use the ACI/MFW functional interface in these cases. However, given the current implementation of this interface, it is only possible with function immediately returning successfully (synchronous case). This is due to the current impossibility to redirect callbacks. Asynchronous ACI features should only be necessary for SIM accessing: for this case corresponding cmhSIMfunctions may be used. However in order to limit ACI dependency, calls of such functions shall be encapsulated in an ACI adapter layer in the CPHS module.

This document also contains the description of an AT-command-based interface for CPHS features. AT commands and corresponding Command Handler functions (for MFW/BMI use) here described give full control over CPHS functionalities for any type of user (ATI or MFW).

### 3.2 CHANGES

### 3.3 General Data Types

#### 3.3.1 T\_CPHS\_RET

**Definition:**

```
typedef enum
{
    CPHS_FAIL                = -1,
    CPHS_OK,
    CPHS_EXEC,
    CPHS_BUSY,
    CPHS_NOT_INIT,
} T_CPHS_RET;
```

**Elements:**

<b>CPHS_FAIL</b>	unspecific failure
<b>CPHS_OK</b>	successful execution
<b>CPHS_EXEC</b>	execution in progress
<b>CPHS_BUSY</b>	module is already in use... Retry later

**CPHS\_NO\_INIT** module has not been initialised

**Description:**

These are the different return codes possible when calling a CPHS interface function.

### 3.3.2 T\_CPHS\_LINES

**Elements:**

<b>CPHS_LINE_NULL</b>	line parameter is irrelevant
<b>CPHS_LINE1</b>	standard voice line
<b>CPHS_LINE_DATA</b>	bearer data line
<b>CPHS_LINE_FAX</b>	bearer fax line
<b>CPHS_LINE2</b>	auxiliary speech line (in case of ALS)

**Description:**

These are the different lines CPHS functionalities may apply to.

**Definition:**

```
#define CPHS_LINE_NULL    (0x0000)
#define CPHS_LINE1        (0x0001)
#define CPHS_LINE_DATA    (0x0002)
#define CPHS_LINE_FAX     (0x0004)
#define CPHS_LINE2        (0x0100)
```

These values have been chosen for consistency with the concept of classes in AT commands definitions such as CCFC or CLCK.

**Type definition:**

```
#define T_CPHS_LINES      USHORT
```

The reason why no enum is being used here is that CPHS lines are to be used in bit fields. So it is more handy to have these #defines in order to handle CPHS lines.

### 3.3.3 T\_CPHS\_CB

**Definition:**

```
typedef enum
{
    CPHS_INIT_RES = 1,
    CPHS_ROAM_IND,
    CPHS_VOICE_MAIL_IND,
    CPHS_VOICE_MAIL_RES,
    CPHS_CFU_RES
} T_CPHS_CB;
```

**Elements:**

<b>CPHS_INIT_RES</b>	Result of initialisation
<b>CPHS_ROAM_IND</b>	Roaming indicator
<b>CPHS_VOICE_MAIL_IND</b>	Incoming voice mail indication

<b>CPHS_VOICE_MAIL_RES</b>	Read/Write voice mail flag result
<b>CPHS_CFU_RES</b>	Read/Write call diverted flag result

**Description:**

These are the different contexts where the CPHS module may call the ACI callback.

### 3.3.4 T\_CPHS\_PARAMS

typedef struct

```
{
    T_CPHS_CB cb_type;
    T_CPHS_RET operation_result;
    UBYTE set_flag;
    T_CPHS_LINES line;
} T_CPHS_PARAMS;
```

**Elements:**

<b>cb_type</b>	Callback type of ACI callback
<b>operation_result</b>	Return value of the CPHS interface functions
<b>set_flag</b>	Auxiliary setflag
<b>line</b>	Different lines CPHS functionalities may apply to

**Description:**

This is the structure passed by CPHS module when it has to inform the user. Cb\_type informs about what CPHS functionality is involved and thus how to interpret the set\_flag data.

### 3.3.5 T\_CPHS\_USER\_CB

typedef void T\_CPHS\_USER\_CB( T\_CPHS\_PARAMS \*params );

**Description:**

Prototype type of callback to be used by the CPHS module to inform user (ATI/MFW).

## 3.4 General Functions

### 3.4.1 cphs\_check\_status

**Prototype:**

T\_CPHS\_RET cphs\_check\_status(void);

**Parameters:**

*void*

**Return:**

<b>CPHS_BUSY</b>	CPHS module is busy
<b>CPHS_OK</b>	CPHS module is initialised and ready to process
<b>CPHS_NOT_INIT</b>	CPHS module has not been initialised

**Description:**

This function checks whether CPHS module has been initialised or if it is currently being used.

### 3.4.2 cphs\_line\_makes\_sense

**Prototype:**

BOOL cphs\_line\_makes\_sense(T\_CPHS\_LINES line);

**Parameters:**

*line* Different lines CPHS functionalities may apply to

**Return:**

**TRUE** line is a CPHS line  
**FALSE** line is not a CPHS line

**Description:**

This function returns TRUE if the given line is a valid CPHS line..

## 3.5 START/END/REFRESH CPHS MODULE

### 3.5.1 ACI/CPHS Module functional interface

#### 3.5.1.1 cphs\_start

**Prototype:**

**T\_CPHS\_RET cphs\_start (T\_CPHS\_USER\_CB \*cphs\_user\_cb);**

**Parameters:**

*cphs\_user\_cb( )* contains callback to be used by the CPHS module to inform user (ATI/MFW).

**Return:**

**CPHS\_EXEC** CPHS module is being initialised  
**CPHS\_FAIL** an error occurred (e.g. parameter passed is a NULL pointer)  
**CPHS\_BUSY** CPHS has already been started to initialise  
**CPHS\_OK** CPHS module already initialised

**Description:**

Initialises the CPHS module (read some parameters from the SIM).

#### 3.5.1.2 cphs\_refresh\_data

**Prototype:**

**T\_CPHS\_RET cphs\_refresh\_data (void);**

**Parameters:**

*void*

**Return:**

**CPHS\_EXEC** CPHS module is being initialised  
**CPHS\_FAIL** an error occurred  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Refresh the cached CPHS parameter from SIM.

#### 3.5.1.3 cphs\_stop

**Prototype:**

**T\_CPHS\_RET cphs\_stop (void);**

**Parameters:**

*void*

**Return:**

**CPHS\_OK** execution OK  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Ends CPHS module functionalities. **cphs\_start( )** will be needed before using the CPHS library again.

### 3.5.2 AT command

#### 3.5.2.1 AT%CPHS

**Table 1: %CPHS parameter command syntax**

Command	Possible response(s)
%CPHS=<init_mode>	+CME ERROR: <err>
%CPHS?	%CPHS: <init_mode> +CME ERROR: <err>
%CPHS=?	%CPHS: (list of supported <init_mode>s) +CME ERROR: <err>

#### Description

This set command allows initialising and closing CPHS functionalities. Initialising is mandatory if the user aims at using CPHS functionality (e.g. retrieving voice waiting message). When initialising, the CPHS module proceeds to retrieve data from SIM to cache them internally, this allowing direct availability of these data. Initialising means also enabling all CPHS related indications (e.g. Call Diverted Indicator, Call Waiting Message Indicator, etc...). Closing CPHS functionality will stop CPHS indications to be displayed. It will also free the related memory needed to cache CPHS data.

If setting fails in an MError, +CME ERROR: <err> is returned. Refer subclause 9.2 for <err> values.

Read command returns the current state of CPHS functionalities: initialised, refreshing (only while refreshing is in progress. When progress is done, initialised will be shown) or closed.

Test command returns supported <init\_mode>-values.

#### Defined values

<init\_mode>: integer type value indicating:

- 0 – Closes CPHS functionalities (default).
- 1 – Initializes CPHS functionalities.
- 2 – Refreshes CPHS data cached from SIM.

### 3.5.3 ACI/MFW functional interface

#### 3.5.3.1 Data types

#### 3.5.4 T\_ACI\_CPHS\_INIT

##### Definition:

```
typedef enum
{
    ACI_CPHS_CLOSE    = 0,
    ACI_CPHS_INIT,
    ACI_CPHS_REFRESH,
    ACI_CPHS_BUSY
} T_ACI_CPHS_INIT;
```

##### Elements:

ACI_CPHS_CLOSE	close CPHS functionalities
ACI_CPHS_INIT	initialised CPHS functionalities

<b>ACI_CPHS_REFRESH</b>	refreshes CPHS data
<b>ACI_CPHS_BUSY</b>	CPHS module is busy

**Description:**

These are the different values of parameter `init_cphs` for `sAT_PercentCPHS` and `qAT_PercentCPHS`.

**3.5.4.1 sAT\_PercentCPHS**

**Prototype:**

```
T_ACI_RETURN sAT_PercentCPHS(T_ACI_CMD_SRC srcId, T_ACI_CPHS_INIT init_cphs);
```

**Parameters:**

<i>init_cphs</i>	Initialising/closing/refreshing CPHS module.
------------------	--

**Return:**

<b>AT_EXCT</b>	CPHS module is initialising
<b>AT_CMPL</b>	operation successful (can occur: e.g. end CPHS)
<b>AT_FAIL</b>	an error occurred

**Description:**

Starts/ends/refreshes CPHS functionalities.

When initialising, `cphs_start()` will be called with parameter `cphs_user_cb = &cmhCPHS_user_cb()`, then `void cmhCPHS_user_cb(T_CPHS_PARAMS *params)` is to be implemented in the command handler part of ACI (file `cmh_cphs.c`). The function will then take care of providing the right user with the right data (using the right `R_AT` callback).

**3.5.4.2 qAT\_PercentCPHS**

**Prototype:**

```
T_ACI_RETURN qAT_PercentCPHS(T_ACI_CMD_SRC srcId, T_ACI_CPHS_INIT * init_cphs);
```

**Parameters:**

<i>init_cphs</i>	Contains status of CPHS module.
------------------	---------------------------------

**Return:**

<b>AT_CMPL</b>	status of CPHS module has been successfully retrieved
<b>AT_FAIL</b>	an error occurred

**Description:**


Queries the status of CPHS functionalities.

### 3.5.5 MSC

[Starts CPHS functionality or refreshes CPHS data from SIM]

AT%CPHS=1 or AT%CPHS=2

OK

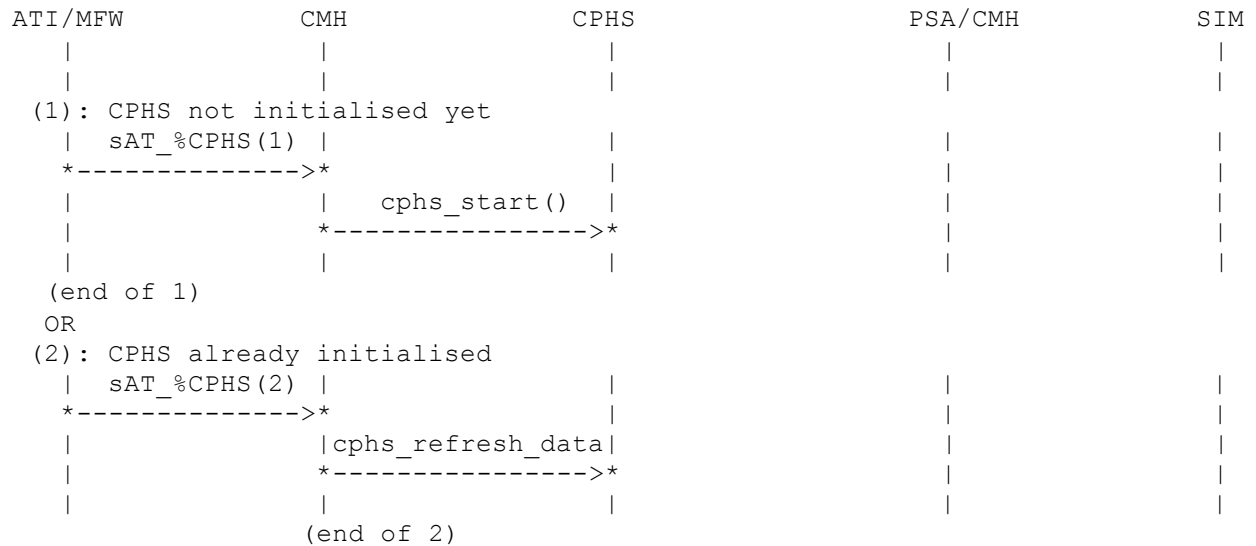

```

(3)
|                                     | cmhSIM_ReadTranspEF |
|                                     | *----->*          |
|                                     |                                     |
|                                     | SIM_READ_REQ        |
|                                     | *=====>*          |
|                                     |                                     |
| CPHS_EXEC                          |                                     |
| *<--%ret result%--*              |                                     |
|                                     |                                     |
| AT_EXCT                           |                                     |
| *<--%ret result%--*              |                                     |
|                                     |                                     |
|                                     | SIM_READ_CNF        |
|                                     | *<=====*          |
|                                     |                                     |
|                                     | cphs_sim_data_cb() |
|                                     | *<-----*          |
|                                     |                                     |
(end of 3) : (3) can be repeated if needed

```

```

|                                     | cmhCPHS_user_cb() |
|                                     | CPHS_INIT_RES     |
|                                     | *<-----*          |
| rAT_OK( )                         |                                     |
| *<-----*                         |                                     |
|                                     |                                     |

```

[Ends CPHS functionality]  
AT%CPHS=0  
OK

ATI/MFW	CMH	CPHS	PSA	SIM
sAT_%CPHS(0)				
*----->*				
	cphs_stop()			
	*----->*			
(1): CPHS not initialised yet				
	CPHS_NOT_INIT			
	*<--%ret result%--*			
rAT_CME()				
*<-----*				
(end of 1)				
OR				
(2): CPHS had been initialised				
	CPHS_OK			
	*<--%ret result%--*			
rAT_OK( )				
*<-----*				



	(end of 2)			

## 3.6 NETWORK OPERATOR NAME

### 3.6.1 ACI/CPHS Module functional interface

#### 3.6.1.1 cphs\_get\_opn

##### Prototype:

```
T_CPHS_RET cphs_get_opn (CHAR *longname, UBYTE *max_longname, CHAR *shortname, UBYTE
                          *max_shortname);
```

##### Parameters:

<i>longname</i>	operator long name
<i>max_longname</i>	maximal length of long name:  IN: should contain the size of memory allocated for <i>longname</i> .  OUT: If memory is not enough, then function returns with CPHS_FAIL and <i>max_longname</i> will contain the amount of memory needed. Otherwise contains amount of written characters.
<i>shortname</i>	operator short name
<i>max_shortname</i>	maximal length of short name:  IN: should contain the size of memory allocated for <i>shortname</i> .  OUT: If memory is not enough, then function returns with CPHS_FAIL and <i>max_shortname</i> will contain the amount of memory needed. Otherwise contains amount of written characters.

##### Return:

<b>CPHS_OK</b>	execution OK
<b>CPHS_BUSY</b>	CPHS module is busy
<b>CPHS_FAIL</b>	error occurred: if *max_buffer is not 0, then reason is memory for *buffer is not enough: check max_buffer for amount of memory needed.
<b>CPHS_NOT_INIT</b>	CPHS module has not been initialised

##### Description:

Returns the operator long name and short name if available.

### 3.6.2 AT command

#### 3.6.2.1 AT% CPOPn

Table 2: %CPOPN parameter command syntax

Command	Possible response(s)
%CPOPN?	%CPOPN: <LONG_NAME>[,<SHORT_NAME>] +CME ERROR: <err>
%CPOPN=?	

%CPOP: "LONG NAME"[, "SHORT NAME"] will be displayed as intermediate result if operation is successful (short name is optional: it will be shown only if SIM supports this feature).

This query command returns the long and short names of the operator as stored in the corresponding SIM fields.

## Defined values

<LONG\_NAME>: string type indicating: Operator Long Name

<SHORT NAME>: string type indicating: Operator Short Name (optional: may not be present in SIM)

### 3.6.3 ACI/MFW functional interface

### 3.6.3.1 qAT\_PercentCPOPN

**Prototype:**

```
T_AC1_RETURN qAT_PercentCPOP(T_AC1_CMD_SRC srcId, CHAR*longname,
                               UBYTE*max_longname, CHAR*shortname, UBYTE*max_shortname);
```

### Parameters:

<i>longname</i>	operator long name
-----------------	--------------------

<i>max_longname</i>	maximal length of long name:
---------------------	------------------------------

IN: should contain the size of memory allocated for *longname*.

OUT: If memory is not enough, then function returns with AT\_FAIL and max\_longname will contain the amount of memory needed. Otherwise contains amount of written characters.

<i>shortname</i>	operator short name
------------------	---------------------

<i>max_shortcode</i>	maximal length of short name:
----------------------	-------------------------------

IN: should contain the size of memory allocated for *shortname*.

OUT: If memory is not enough, then function returns with AT\_FAIL and max\_shortcode will contain the amount of memory needed. Otherwise contains amount of written characters.

**Return:**

**AT\_CMPL** successfully completed


**AT\_FAIL** an error occurred: if \*max\_buffer is not 0, then reason is memory for \*buffer is not enough: check max\_buffer for amount of memory needed.

**Description:**

Queries long and short names of the operator.

### 3.6.4 MSC

[Gets operator long and/or short name]  
AT%CPN?  
%CPN: "operator long name","op"  
OK

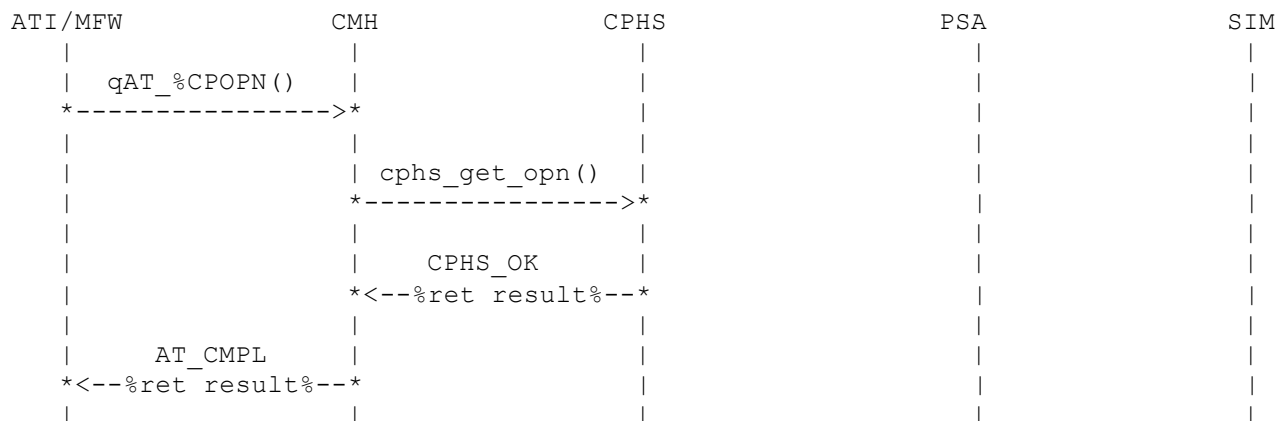

## 3.7 HOME COUNTRY ROAMING INDICATOR

### 3.7.1 ACI/CPHS Module functional interface

#### 3.7.1.1 cphs\_roaming\_ind

##### Prototype:

```
void cphs_roaming_ind(UBYTE roaming_status);
```

##### Parameters:

*roaming\_status*                      roaming status

##### Values:

#define CPHS\_ROAMING\_ON (1)

#define CPHS\_ROAMING\_OFF (0)

##### Description:

          Informs the CPHS module that the *Roaming* state has changed.

### 3.7.2 AT command

#### 3.7.2.1 %CPROAM

**Table 3: %CPROAM parameter unsolicited result syntax**

Unsolicited Result
%CPROAM: <roam_status>

##### Description

This unsolicited result will be displayed whenever the mobile's Roaming registration state has changed.

##### Defined values

<roam\_status>: integer type value indicating:

- 0           – Mobile is not in Roaming state.

- 1 – Mobile is in Roaming state (mobile is registered to an other than the home network).

### 3.7.3 ACI/MFW functional interface

#### 3.7.3.1 rAT\_PercentCPROAM

##### Prototype:

```
void rAT_PercentCPROAM(UBYTE roam_status);
```

##### Parameters:

<i>roaming_status</i>	roaming status
-----------------------	----------------

##### Values:

```
#define CPHS_ROAMING_ON (1)
```

```
#define CPHS_ROAMING_OFF (0)
```

##### Return:

```
void
```

##### Description:


Informs ATI/MFW that the mobile's *Roaming* state has changed.

### 3.7.4 MSC

[CPHS Roaming Indicator]

Unsolicited Message:

%CPROAM: 1

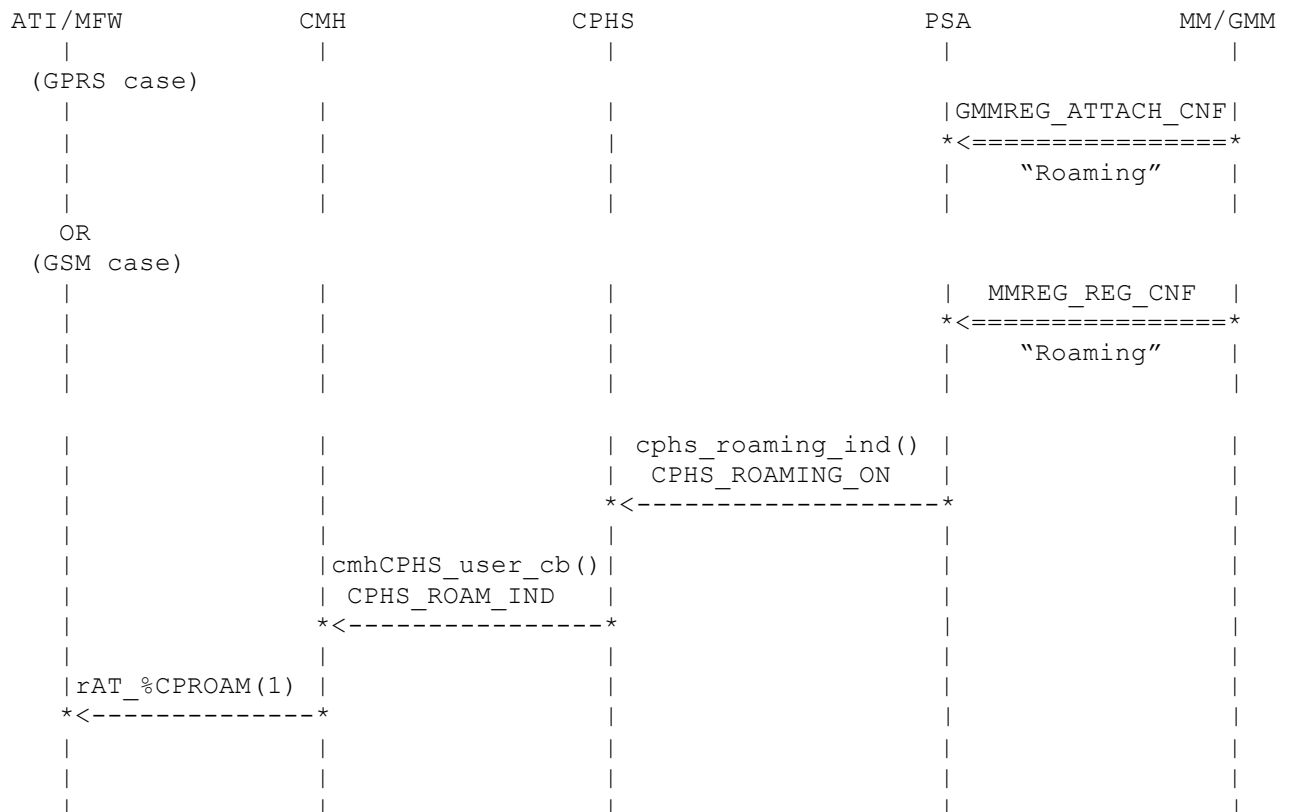

## 3.8 VOICE MESSAGE WAITING

### 3.8.1 ACI/CPHS Module functional interface

#### 3.8.1.1.1 cphs\_voice\_mail\_ind

**Prototype:**

```
void cphs_voice_mail_ind(UBYTE set_flag, T_CPHS_LINES line);
```

**Parameters:**

<i>set_flag</i>	waiting flag is to be set/erased on the SIM
<i>line</i>	line to which apply received Voice Mail Indication.

**Return:**

void

**Description:**

Indication to the CPHS module that a Voice Mail related SMS has been received from the network.

#### 3.8.1.2 Voice Message Waiting Indicator Setting/Clearing/Reading

##### 3.8.1.2.1 cphs\_set\_waiting\_flag

**Prototype:**

```
T_CPHS_RET cphs_set_waiting_flag(UBYTE set_flag, T_CPHS_LINES lines);
```

**Parameters:**

<i>set_flag</i>	waiting flag is to be set/erased on the SIM Values: #define CPHS_SET_WAITING_FLAG (1) #define CPHS_ERASE_WAITING_FLAG (0)
<i>lines</i>	lines associated to waiting flag indicator: it is a bit mask, so it can be used to change the flag status for several lines at once.

**Return:**

<b>CPHS_EXEC</b>	operation in progress
<b>CPHS_BUSY</b>	CPHS module is busy
<b>CPHS_NOT_INIT</b>	CPHS module has not been initialised

**Description:**

Controls state of Waiting Indicator Flag on the SIM.

##### 3.8.1.2.2 cphs\_get\_waiting\_flag

**Prototype:**

```
T_CPHS_RET cphs_get_waiting_flag(UBYTE *flag_set, T_CPHS_LINES line);
```

**Parameters:**

<i>flag_set</i>	contains flag status. Values: #define CPHS_FLAG_DEACTIVATED (0) #define CPHS_FLAG_ACTIVATED (1) #define CPHS_FLAG_NOT_PRESENT (2)
-----------------	---

#define CPHS\_FLAG\_ERROR (3)

*line* line associated to waiting flag indicator: it is NOT a bit mask !!

**Return:**

**CPHS\_OK** operation successful  
**CPHS\_FAIL** an error occurred (ex: line contains more than one line)  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Retrieves state of waiting indicator flag for a given bearer capability from the CPHS cached data.

### 3.8.2 AT command

#### 3.8.2.1 %CPVWI

**Table 4: %CPVWI parameter command syntax**

Command	Possible response(s)
%CPVWI=<mode>,<line>	%CPVWI: <status>[,<line>] +CME ERROR: <err>
%CPVWI?	+CME ERROR: <err>
%CPVWI=?	%CPVWI: (list of supported <mode>s,<line>s) +CME ERROR: <err>

**Table 5: %CPVWI parameter unsolicited result syntax**

Unsolicited Result
%CPVWI: <status>,<line>

**Description**

This set command allows setting, clearing, querying of the status of the Voice Waiting Message Flag for one or several lines.

When querying, intermediate result is %CPVWI: status,(lines) (lines is optional: either Voice Waiting Message flag is set for no line and intermediate result is %CPVWI: 0, or Voice Waiting Message flag is set for at least one line and intermediate result is %CPVWI= 1,set\_lines).

An unsolicited result %CPVWI: status,line will be displayed upon receiving a Voice Message Waiting SMS from the network.

**Defined values**

<mode>: integer type value indicating:

- 0 – Clear Voice Waiting Message Flag.
- 1 – Set Voice Waiting Message Flag.
- 2 – Query Voice Waiting Message Flag status.

<line>: bit field type value indicating possible sum of following values:

- 1 – Line 1
- 2 – Data
- 4 – Fax
- 256 – Line 2

<status>: integer type value indicating:

- 0 – Clear
- 1 – Set

### 3.8.3 ACI/MFW functional interface

#### 3.8.3.1 sAT\_PercentCPVWI

**Prototype:**

**T\_ACI\_RETURN sAT\_PercentCPVWI(T\_ACI\_CMD\_SRC *srcId*, UBYTE *flag\_set*, T\_CPHS\_LINES *lines*);**

**Parameters:**

*flag\_set* flag status.  
Values:  
#define CPHS\_SET\_WAITING\_FLAG (1)  
#define CPHS\_ERASE\_WAITING\_FLAG (0)

*lines* line to which change applies: it is a bit mask, so it can be used to change the flag status for several lines at once.

**Return:**

**AT\_EXCT** operation in progress  
**AT\_FAIL** an error occurred

**Description:**

Allows setting or clearing the voice waiting message flag for any line.

#### 3.8.3.2 qAT\_PercentCPVWI

**Prototype:**

**T\_ACI\_RETURN qAT\_PercentCPVWI(T\_ACI\_CMD\_SRC *srcId*, UBYTE \* *flag\_set*, T\_CPHS\_LINES *line*);**

**Parameters:**

*flag\_set* flag status.  
Values:  
#define CPHS\_FLAG\_DEACTIVATED (0)  
#define CPHS\_FLAG\_ACTIVATED (1)  
#define CPHS\_FLAG\_NOT\_PRESENT (2)  
#define CPHS\_FLAG\_ERROR (3)

*line* line to which query applies: it is NOT a bit mask !!

**Return:**

**AT\_CMPL** successfully completed  
**AT\_FAIL** an error occurred: (ex: line contains more than one line)

**Description:**

Queries the current setting for voice waiting message flag for each line.

#### 3.8.3.3 rAT\_PercentCPVWI

**Prototype:**

**void rAT\_PercentCPVWI(UBYTE *flag\_set*, T\_CPHS\_LINES *line*);**

**Parameters:**

*flag\_set* flag status.  
Values:  
#define CPHS\_SET\_WAITING\_FLAG (1)

#define CPHS\_ERASE\_WAITING\_FLAG (0)

*line*                    line to which query applies

**Return:**

**void**

**Description:**

          Informs ATI/MFW that a new Voice Message is awaiting retrieval.





```
*<-%ret result%-*  
|  
|  
| SIM_UPDATE_CNF |  
| *<===== * |  
| cphs_sim_data_cb() |  
| *<----- * |  
| cmhCPHS_user_cb() |  
| CPHS_VOICE_MAIL_RES |  
| *<----- * |  
| rAT_OK( ) |  
| *<----- * |
```

[illegible]

**CPHS\_EXEC** operation in progress  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Controls state of Unconditional Call Forwarding Flag on the SIM.

**3.9.1.1.2 cphs\_get\_fwd\_flag**

**Prototype:**

**T\_CPHS\_RET cphs\_get\_fwd\_flag(UBYTE \*cfu\_set, T\_CPHS\_LINES line);**

**Parameters:**

*cfu\_set* flags whether Call Forwarding Unconditional is active or not

Values:

#define CPHS\_FLAG\_DEACTIVATED (0)

#define CPHS\_FLAG\_ACTIVATED (1)

#define CPHS\_FLAG\_NOT\_PRESENT (2)

#define CPHS\_FLAG\_ERROR (3)

*line* line to which CFU status applies. (This is NOT a bit mask)

**Return:**

**CPHS\_OK** operation successful  
**CPHS\_FAIL** an error occurred (ex: line contains more than one line)  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Retrieves the Call Forwarding flag status stored on the SIM.

**3.9.2 AT command**

**3.9.2.1 %CPCFU**

**Table 6: %CPCFU parameter command syntax**

Command	Possible response(s)
%CPCFU=<mode>,<line>	%CPCFU: <status>[,<line>] +CME ERROR: <err>
%CPCFU?	+CME ERROR: <err>
%CPCFU=?	%CPCFU: (list of supported <mode>s,<line>s) +CME ERROR: <err>

**Description**

This set command allows setting, clearing, querying of the status of the Call Diverted Flag for one or several lines.

This query command allows querying the current status of the Call Diverted Flag on the SIM for one or several lines.

When querying, intermediate result is %CPCFU: status,(lines) (lines is optional: either Unconditional Call Forwarding has not been activated for any line and intermediate result is %CPCFU: 0, or Unconditional Call Forwarding has been activated for at least one line and intermediate result is %CPCFU= 1,set\_lines).

**Defined values**

<mode>: integer type value indicating:

0 – Clear Call Diverted Flag

1 – Set Call Diverted Flag.

2 – Query Call Diverted Flag status.

<line>: bit field type value indicating possible sum of following values:

1 – Line 1

2 – Data

4 – Fax

256 – Line 2

<status>: integer type value indicating:

0 – Activated

1 – Deactivated

### 3.9.3 ACI/MFW functional interface

#### 3.9.3.1 sAT\_PercentCPCFU

**Prototype:**

**T\_ACI\_RETURN sAT\_PercentCPCFU(T\_ACI\_CMD\_SRC *srcId*, UBYTE *cfu\_set*, T\_CPHS\_LINES *lines*);**

**Parameters:**

*cfu\_set* flag status.

Values:

#define CPHS\_SET\_CFU\_FLAG (1)

#define CPHS\_ERASE\_CFU\_FLAG (0)

*lines* line to which change applies: it is a bit mask, so it can be used to change the flag status for several lines at once.

**Return:**

**AT\_EXCT** operation in progress

**AT\_FAIL** an error occurred

**Description:**

Allows setting or clearing the Call Forwarding Unconditional flag for any line.

#### 3.9.3.2 qAT\_PercentCPCFU

**Prototype:**

**T\_ACI\_RETURN qAT\_PercentCPCFU(T\_ACI\_CMD\_SRC *srcId*, UBYTE \**cfu\_set*, T\_CPHS\_LINES *line*);**

**Parameters:**

*cfu\_set* flags whether Call Forwarding Unconditional is active or not

Values:

#define CPHS\_FLAG\_DEACTIVATED (0)

#define CPHS\_FLAG\_ACTIVATED (1)

#define CPHS\_FLAG\_NOT\_PRESENT (2)

#define CPHS\_FLAG\_ERROR (3)

*line* line to which CFU query applies (this is not a bit mask)

**Return:**


**AT\_CMPL** successfully completed

**AT\_FAIL**          an error occurred (ex: line contains more than one line)  
**Description:**  
    Queries the current call forwarding flag state.

### 3.9.4 MSC


[CPHS Set/Clear CFU Flag]

AT%CPCFU=0                      Clears flag for all lines.  
OK

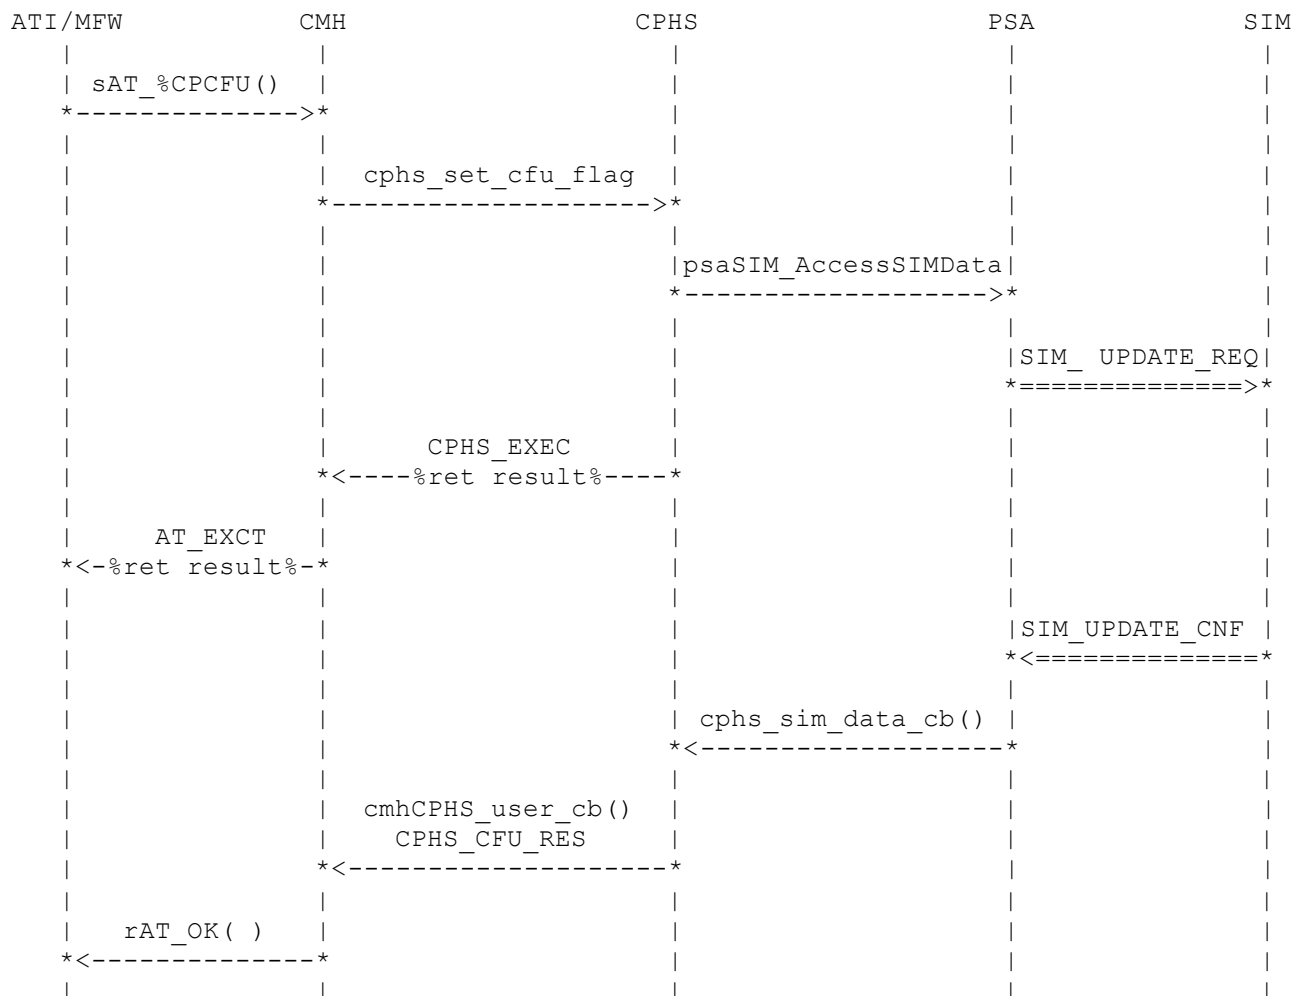

[CPHS Get CFU Flag]

AT%CPCFU=2,1                      Queries for line 1.  
%CPCFU: 0                      CFU is inactive for line 1.  
OK

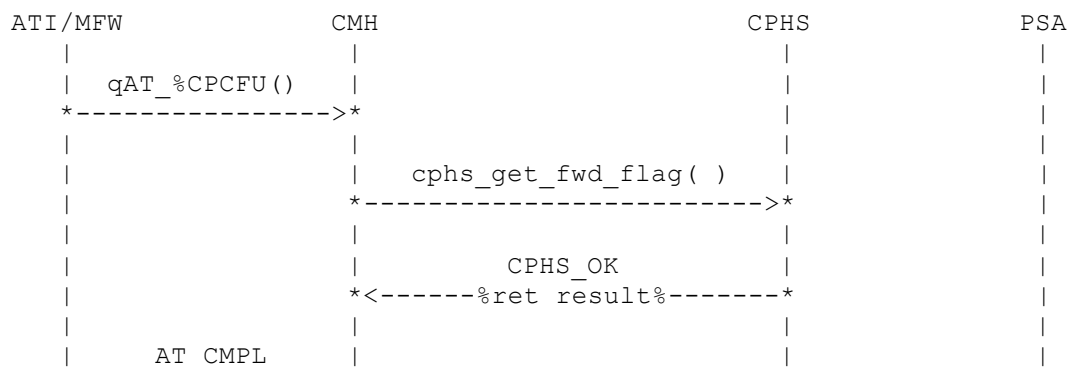

```
*<--%ret result%--*
|                               |
```

## 3.10 CURRENT LINE INDICATOR and ALS

### 3.10.1 ACI/CPHS Module functional interface

#### 3.10.1.1.1 cphs\_get\_line

##### Prototype:

```
T_CPHS_RET cphs_get_line(UBYTE srcId, UBYTE call_id, T_CPHS_LINES *line, CHAR *line_desc,
UBYTE *max_line_desc);
```

##### Parameters:

*call\_id* call id of line being queried. This value is the same as the call id described in GSM 02.30 subclause 4.5.5.1 (also see AT+CLCC). If not present (value 255), then current active line is to be returned.

*line* contains line of queried call, or current active line.

*line\_desc* line identification in SIM

*max\_line\_desc* maximal length of line\_desc:

*IN:* should contain the size of memory allocated for *line\_desc*.

*OUT:* If memory is not enough, then function returns with CPHS\_FAIL and *max\_line\_desc* will contain the amount of memory needed. Otherwise contains amount of written characters.

##### Return:

**CPHS\_OK** execution OK

**CPHS\_FAIL** error occurred: if \*max\_buffer is not 0, then reason is memory for \*buffer is not enough: check max\_buffer for amount of memory needed.

**CPHS\_BUSY** CPHS module is busy

**CPHS\_NOT\_INIT** CPHS module has not been initialised

##### Description:

Informs the CPHS module what current line is active for a MT call.

### 3.10.2 AT command

#### 3.10.2.1 %CPALS

Table 7: %CPALS parameter command syntax

Command	Possible response(s)
%CPALS=<call_id>	%CPALS: <line>, <MSISDN Id> +CME ERROR: <err>
%CPALS?	%CPALS: <line>, <MSISDN Id> +CME ERROR: <err>
%CPALS=?	

##### Description

This set command allows querying the bearer of a given call. The user has thus the possibility to query the line of a current call.

The query command returns the current active line.

##### Defined values

<call\_id>: integer type value indicating:

call id of line being queried. This value is the same as the call id described in GSM 02.30 subclause 4.5.5.1 (also see AT+CLCC).

<line>: integer type value indicating possible sum of following values:

- 1           – Line 1
- 2           – Data
- 4           – Fax
- 256        – Line 2

<MSISDN id>: string type value indicating:

This is the MSISDN identification as found on the SIM. If no MSISDN identification can be found on the SIM then the default strings “Line 1”, “Data”, “Fax” and “Line 2” will be applied.

### 3.10.3 ACI/MFW functional interface

#### 3.10.3.1 qAT\_PercentCPALS

**Prototype:**

**T\_ACI\_RETURN qAT\_PercentCPALS(T\_ACI\_CMD\_SRC *srcId*, UBYTE *call\_id*, T\_CPHS\_LINES \**line*, CHAR \**line\_desc*, UBYTE \**max\_line\_desc*);**

**Parameters:**

- call\_id*           call id of line being queried. This value is the same as the call id described in GSM 02.30 subclause 4.5.5.1 (also see AT+CLCC). If not present (value 255), then current active line is to be returned.
- line*             contains line of queried call, or current active line.
- line\_desc*        line identification in SIM
- max\_line\_desc*   maximal length of line\_desc:  
  
*IN:* should contain the size of memory allocated for *line\_desc*.  
*OUT:* If memory is not enough, then function returns with AT\_FAIL and *max\_line\_desc* will contain the amount of memory needed. Otherwise contains amount of written characters.

**Return:**

- AT\_CMPL**        successfully completed
- AT\_FAIL**        error occurred: if \*max\_buffer is not 0, then reason is memory for \*buffer is not enough: check max\_buffer for amount of memory needed.


**Description:**

Gives the user the possibility to query at any moment the current active line and for any call its related line (e.g. when receiving a MT call)



### 3.10.4 MSC

```
[CPHS Alternate Line Service]
RING
AT+CLCC
+CLCC: 1,1,4,0,0 // incoming voice MT call with cId 1
OK
AT%CPALS=1 // queries line of MT call
%CPALS: 2 // call aimed at line 2 MSISDN
OK
AT%CPALS? // queries current active line
%CPALS: 1 // active line is line 1 MSISDN
OK
```

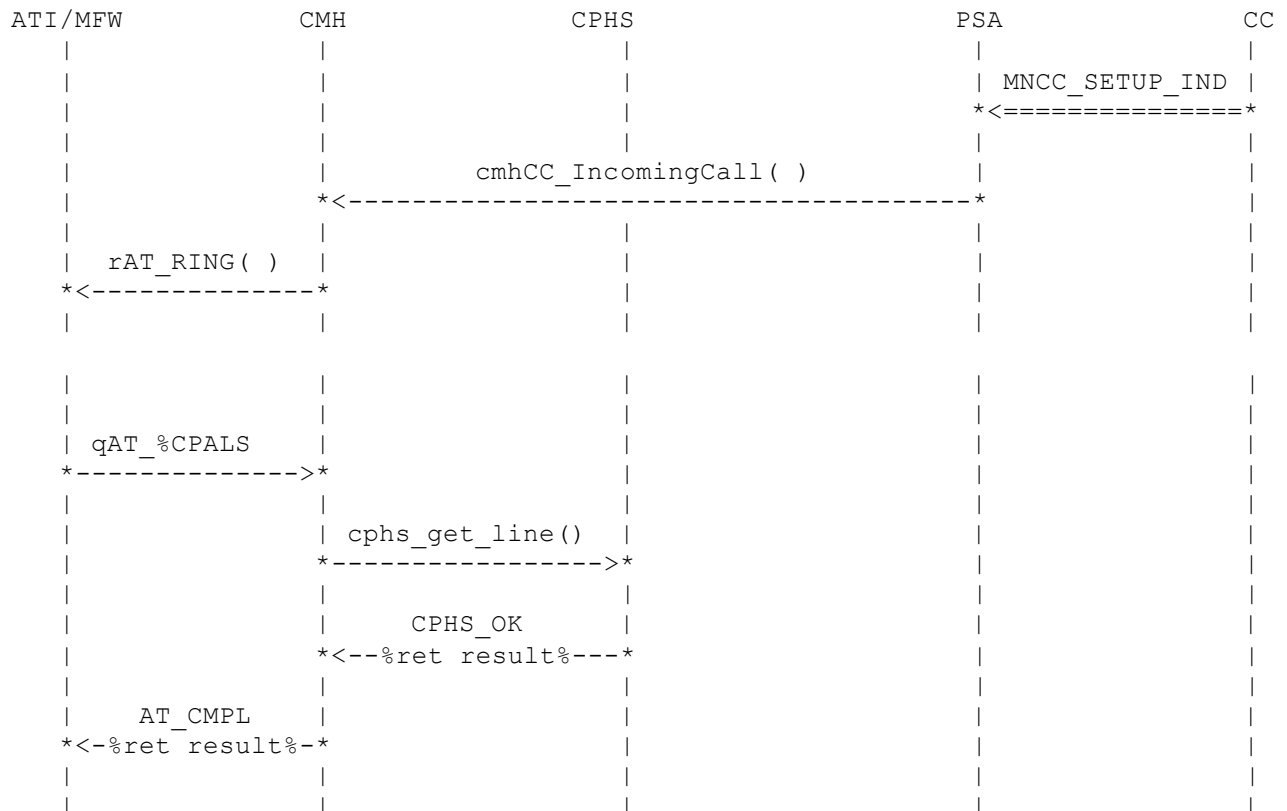

### 3.11 EMERGENCY CALL 999

This feature is already covered by later GSM recommendation. This means CPHS requirements are already fulfilled in the software current implementation.

### 3.12 CPHS INFORMATION and CUSTOMER SPECIFIC PROFILE

#### 3.12.1 Data Types

Some macros will be made available to handle CPHS info and CSP:

```
#define CPHS_CHECK_SST(sst, service, attribute)
```

Has value TRUE if service has "attribute" status.

**Attribute:**

ALLOCATED 1

ACTIVATED 2

**Services:**

CSP 1

SST 2

Mailbox Numbers 3

OpName Shortform 4

Information numbers 5

### 3.12.2 ACI/CPHS Module functional interface

#### 3.12.2.1.1 cphs\_get\_cphs\_info

**Prototype:**

**T\_CPHS\_RET** cphs\_get\_cphs\_info(UBYTE \*phase, USHORT \*sst);

**Parameters:**

<i>phase</i>	<i>either CPHS Phase 1: 1 or CPHS Phase 2: 2</i>
<i>sst</i>	<i>service table: 2 bytes in Hexadecimal format as stored on SIM</i>

**Return:**

<b>CPHS_OK</b>	execution OK
<b>CPHS_BUSY</b>	CPHS module is busy
<b>CPHS_NOT_INIT</b>	CPHS module has not been initialised

**Description:**

Retrieves the information concerning CPHS.

#### 3.12.2.1.2 cphs\_get\_csprof

**Prototype:**

**T\_CPHS\_RET** cphs\_get\_csprof(CHAR \*csp, UBYTE \*max\_csp\_length);

**Parameters:**

<i>csp</i>	customer service profile: format is the one described in CPHS4_2.ww6
<i>max_csp_length</i>	maximal length of <i>csp</i> :  <i>IN</i> : should contain the size of memory allocated for <i>csp</i> .  <i>OUT</i> : If memory is not enough, then function returns with CPHS_FAIL and <i>max_csp_length</i> will contain the amount of memory needed. Otherwise contains amount of written characters.

**Return:**

<b>CPHS_OK</b>	execution OK
<b>CPHS_FAIL</b>	error occurred: if <i>max_csp_length</i> is not 0, then reason is memory for <i>csp</i> is not enough: check <i>max_csp_length</i> for amount of memory needed.
<b>CPHS_BUSY</b>	CPHS module is busy
<b>CPHS_NOT_INIT</b>	CPHS module has not been initialised

**Description:**

Retrieves the Customer Service Profile.

### 3.12.3 AT command

#### 3.12.3.1 %CPINF

**Table 8: %CPINF parameter command syntax**

Command	Possible response(s)
%CPINF?	%CPHS: <phase>, <sst>[, <csp>] +CME ERROR: <err>
%CPINF=?	

#### Description

This query command allows query the CPHS phase, the CPHS service table and the customer service profile.

#### Defined values

<phase>: integer type value indicating:

- 1 – Phase 1.
- 2 – Phase 2.

<sst>: 2 bytes Hexadecimal value indicating:

CPHS Service Table: 2 bytes (format HEX) as defined in CPHS4\_2.wv6.

<csp>: Hexadecimal string indicating:

Customer Service Profile. Format is a hexadecimal string as following: “A1B1A2B2A3B3...” where byte An is the service group code (see CPHS B.4.7.1) and byte Bn the services Byte (see CPHS B.4.7.1)

### 3.12.4 ACI/MFW functional interface

#### 3.12.4.1 qAT\_PercentCPINF

##### Prototype:

```
T_ACI_RETURN qAT_PercentCPINF(T_ACI_CMD_SRC srcId, UBYTE *phase, USHORT *sst,
CHAR *csp, UBYTE *max_csp_size);
```

##### Parameters:

<i>phase</i>	either CPHS Phase 1: 1 or CPHS Phase 2: 2
<i>sst</i>	service table: 2 bytes in Hexadecimal format as stored on SIM
<i>csp</i>	customer service profiles
<i>max_cps_size</i>	maximal length of <i>csp</i> :  <i>IN</i> : should contain the size of memory allocated for <i>csp</i> .  <i>OUT</i> : If memory is not enough, then function returns with CPHS_FAIL and <i>max_csp_length</i> will contain the amount of memory needed. Otherwise contains amount of written characters.

##### Return:

<b>AT_CMPL</b>	successfully completed
<b>AT_FAIL</b>	error occurred: if *max_buffer is not 0, then reason is memory for *buffer is not enough: check max_buffer for amount of memory needed.

##### Description:

Queries the CPHS phase, service table and customer service profiles.



**Parameters:**

*rec\_id* Id of queried mailbox number  
*mailbox\_entry* contains all information concerning queried mailbox number

**Return:**

**CPHS\_OK** execution OK  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Returns mailbox number information stored on SIM at a given record.

### 3.13.2.1.2 cphs\_first\_free

**Prototype:**

**T\_CPHS\_RET** cphs\_first\_free(UBYTE \**first\_free*);

**Parameters:**

*first\_free* Index of first unused entry in mailbox list

**Return:**

**CPHS\_OK** execution OK  
**CPHS\_FAIL** an error occurred: e.g. no information numbers cached

**Description:**

Returns the index of the first unused entry in the mailbox list.

## 3.13.3 AT command

### 3.13.3.1 AT% CPMB

**Table 9: %CPMB parameter command syntax**

Command	Possible response(s)
%CPMB=<record_id>	%CPMB: <record_id>,<line>,<"number">,<toa>,<"alpha id"> +CME ERROR: <err>
%CPMB?	%CPMB: <first> +CME ERROR: <err>
%CPMB=?	%CPMB: (max value of <record_id>) on the SIM +CME ERROR: <err>

**Description**

This set command allows retrieving of the mailbox number by means of its record id on the SIM.  
The query command returns the index of the first free entry in the list.  
Test command returns the number of the existing record entries of mailbox numbers on the SIM.

**Defined values**

<record\_id>: integer type value indicating:

SIM record id of mailbox

<line>: integer type value indicating:

1 – Line 1

- 2           – Data
- 4           – Fax
- 256        – Line 2

<number>: string type value indicating:

mailbox number.

<toa>: Integer type value indicating:

type of address (coded as in GSM 04.08)

<alpha\_id>: string type value indicating:

alpha identifier related to mailbox.

<first> : Integer type value indicating:

index of the first free entry in the list.

### 3.13.4 ACI/MFW functional interface

#### 3.13.4.1 qAT\_PercentCPMB

##### Prototype:

**T\_ACI\_RETURN qAT\_PercentCPMB(T\_ACI\_CMD\_SRC *srcId*, UBYTE *rec\_id*, T\_CPHS\_LINES *line*, CHAR \**number*, T\_ACI\_TOA\_TON *ton*, T\_ACI\_TOA\_NPI *npi*, CHAR \**alpha\_id*, UBYTE \**first*);**

##### Parameters:

<i>rec_id</i>	Id of queried mailbox number
<i>line</i>	line to which apply received Mailbox Number
<i>number</i>	mailbox telephone number
<i>ton</i>	type-of-number of mailbox number
<i>npi</i>	numbering-plan-identifier of mailbox number
<i>alpha_id</i>	alpha identifier related to mailbox
<i>first</i>	first unused entry

##### Return:

<b>AT_CMPL</b>	successfully completed
<b>AT_FAIL</b>	an error occurred

##### Description:

Deals with both the set and query aspects of the %CPMB command. If *rec\_id* is present, indicating a set operation, it will return information relating to the specified mailbox number (via parameters *line*, *number*, *ton*, *npi* and *alpha\_id*). If *rec\_id* is not present, indicating a query operation, it will return the index of the first unused entry in the list (via parameter *first*).



*number*                      pointer to the bcd encoded number  
*ton\_npi*                      ton/npi value of number

**Return:**

**CPHS\_EXEC**                      executing  
**CPHS\_BUSY**                      CPHS module is busy  
**CPHS\_NOT\_INIT**                      CPHS module has not been initialised

**Description:**

Writes a mailbox entry with given parameters to SIM.

### 3.14.2.1.2            cphs\_get\_mb\_parameter

**Prototype:**

**T\_CPHS\_RET** cphs\_get\_mb\_parameter ( **SHORT** \**firstIdx*, **SHORT** \**lastIdx*, **UBYTE** \**nlength*,  
**UBYTE** \**length* );

**Parameters:**

*firstIdx*                      pointer to store first index of mailbox phonebook  
*lastIdx*                      pointer to store first index of mailbox phonebook  
*nlength*                      pointer to the alpha identifier tag  
*length*                      length of the alpha identifier tag

**Return:**

**CPHS\_OK**                      execution OK  
**CPHS\_NOT\_INIT**                      CPHS module has not been initialised

**Description:**

Returns the mailbox phonebook related parameters.

## 3.14.3    AT command

### 3.14.3.1 AT% CPMBW

**Table 10: %CPMBW parameter command syntax**

Command	Possible response(s)
%CPMBW=<record_id>[, [<number>] [, [<toa>], [<text>]]	+CME ERROR: <err>
%CPMBW=?	%CPMBW: (list of supported <record_id>s), <nlength>, (list of supported <type>s), <length> +CME ERROR: <err>

**Description**

Execution command writes phonebook entry in location number <record\_id> of the CPHS mailbox phonebook of the SIM. Entry fields written are phone number <number> (in the format <toa>) and text <text> associated with the number. If <number> is omitted, phonebook entry is deleted. If writing fails in an ME error, +CME ERROR: <err> is returned. Refer subclause 9.2 of 3GPP 07.07 for <err> values.

Test command returns location range supported by the CPHS mailbox phonebook as a compound value, the maximum length of <number> field, supported number formats of the storage, and the maximum length of <text> field. If ME is not currently reachable, +CME ERROR: <err> is returned. Refer subclause 9.2 of 3GPP 07.07 for <err> values.

**Defined values**

<record\_id>: integer type values in the range of location number of mailbox phonebook memory.

**Attention:**



Since there is no support for the parameter the following convention is used  
(refer to the CPHS specification)

<record_id>	line_id	line description
1	1	Line 1
2	2	Data
3	4	Fax
4	256	Line 2

<number>: string type phone number

<toa>: type of address octet in integer format (refer GSM 04.08).

<text>: string type field of maximum length <tlength>

<nlength>: integer type value indicating the maximum length of field <number>

<tlength>: integer type value indicating the maximum length of field <text>

### 3.14.4 ACI/MFW functional interface

#### 3.14.4.1 sAT\_PercentCPMBW

##### Prototype:

```
T_ACI_RETURN sAT_PercentCPMBW( T_ACI_CMD_SRC srcId, SHORT index,
CHAR *number, T_ACI_TOA *type, T_CPHS_PB_TEXT *text);
```

##### Parameters:

<i>srcId</i>	ID of using source
<i>index</i>	index of record
<i>number</i>	pointer to mailbox telephone number
<i>type</i>	pointer to ton/npi of mailbox number in ACI struct
<i>text</i>	pointer to numbering-plan-identifier of mailbox number

##### Return:

<b>AT_EXCT</b>	successfully executing
<b>AT_FAIL</b>	an error occurred

##### Description:

Writes an entry given by index to the CPHS mailbox phonebook SIM storage and updates the respective ME Cache for this entry.

#### 3.14.4.2 tAT\_PercentCPMBW

##### Prototype:

```
T_ACI_RETURN tAT_PercentCPMBW ( T_ACI_CMD_SRC srcId, SHORT *firstIdx,
SHORT *lastIdx, UBYTE *nlength, UBYTE *tlength );
```

##### Parameters:

<i>srcId</i>	ID of using source
<i>firstIdx</i>	pointer to store first index of mailbox phonebook

*lastIdx*                      pointer to store first index of mailboxphonebook  
*nlength*                     pointer to the alpha identifier tag  
*tlength*                     length of the alpha identifier tag

**Return:**


**AT\_OK**                        successfully executed  
**AT\_FAIL**                    an error occurred

**Description:**

Returns the CPHS mailboxphonebook related parameters.

**3.14.5 MSC**

[CPHS Set Mailbox Number]  
AT%CPMBW=2,"012341234",129,"MB LINE 2"  
OK  
  
AT%CPMBW=?  
%CPMBW:  
OK

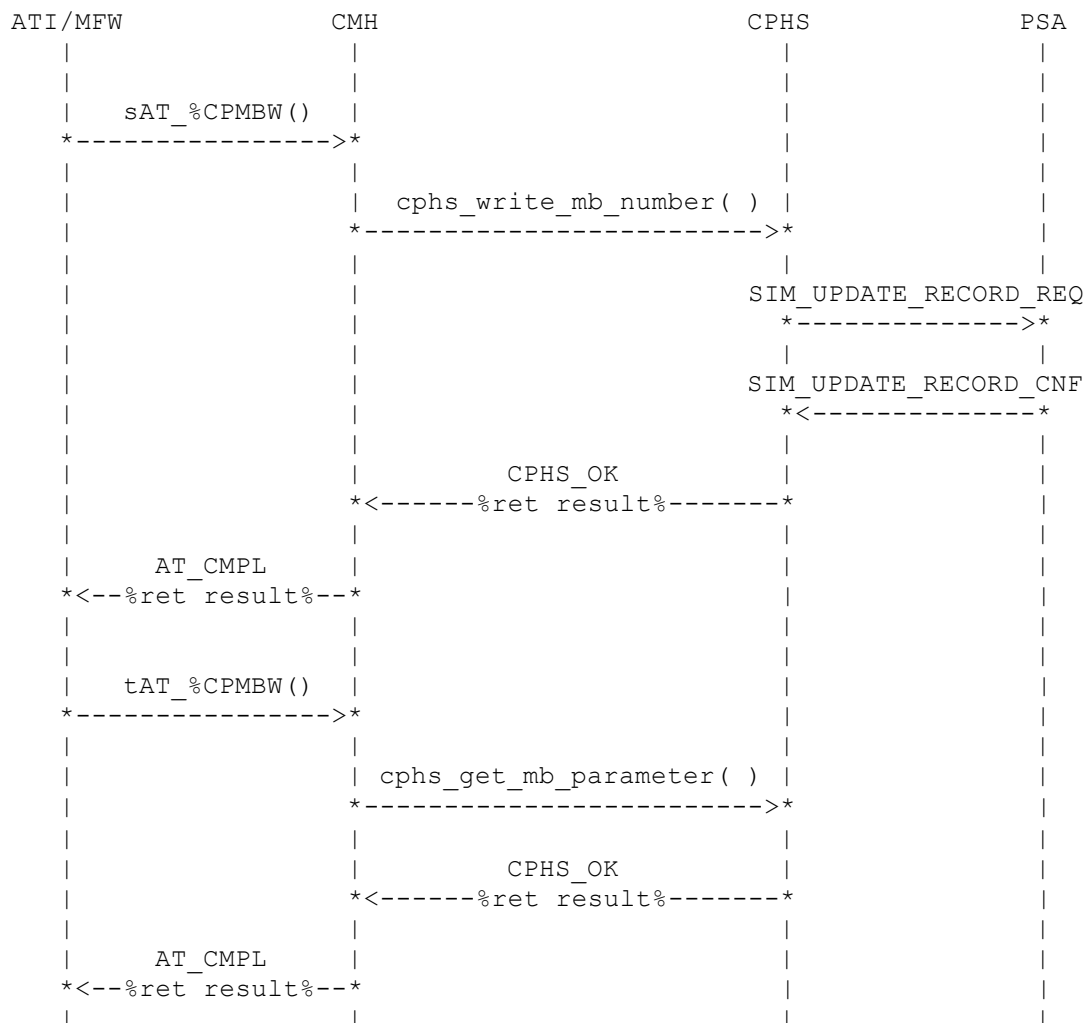

## 3.15 INFORMATION NUMBERS

### 3.15.1 Data Types:

typedef struct

```
{
    UBYTE    element_index;        // index of element described in this structure
    UBYTE    index_level;
    CHAR     alpha_tag[16];
    CHAR     number[12];
    UBYTE    type_of_address;
    BOOL     premium_flag;        // should it be charged with premium price?
    BOOL     network_flag;        // is it network specific ?
} T_CPHS_INF_NUM
```

typedef enum

```
{
    CPNUMS_MODE_EXPLORE    = 1,    // should apply to a folder to be explored
    CPNUMS_MODE_QUERY      = 2     // queries information related to an entry
} T_CPHS_CPNUMS_MODE
```

### 3.15.2 ACI/CPHS Module functional interface

#### 3.15.2.1.1 cphs\_read\_info\_nb

**Prototype:**

```
T_CPHS_RET cphs_read_info_nb (UBYTE element_idx, T_CPHS_INF_NUM *inf_num);
```

**Parameters:**

*element\_idx*      Index of element chosen  
*inf\_num*            structure containing information related to an element

**Return:**

**CPHS\_OK**                      execution OK  
**CPHS\_BUSY**                   CPHS module is busy  
**CPHS\_NOT\_INIT**               CPHS module has not been initialised

**Description:**

Returns whole information of a given element.

#### 3.15.2.1.2 cphs\_explore\_info\_nbs

**Prototype:**

```
T_CPHS_RET cphs_explore_info_nbs(UBYTE element_idx, UBYTE *inf_num_indexes, UBYTE
*max_elmts);
```

**Parameters:**

*element\_idx*      Index of folder element to be explored  
*inf\_num\_list*      returns list of indexes of elements contained in folder

*max\_elmts* limits amount of bytes to be written in *inf\_num\_indexes*. If numbers of elements to be written is bigger, then function returns with CPHS\_EXEC and amount of elements will be written in *max\_elmts* (so that function caller knows how many memory it has to allocate to retrieve the whole list).

**Return:**

**CPHS\_OK** operation successful.  
**CPHS\_EXEC** memory for list was too small. Necessary amount is written in *max\_elmts*.  
**CPHS\_FAIL** an error occurred: e.g. element is no folder.  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

If *element\_idx* has to be a folder. A list of the indexes of the elements contained in the folder will be built and written in *inf\_num\_indexes*. Function caller has previously informed of the size of *inf\_num\_indexes* by means of *max\_elmts*. If this size is too small then function returns with AT\_EXEC and will write the necessary size in *max\_elmts*.

### 3.15.2.1.3 cphs\_info\_num\_get\_max

**Prototype:**

**T\_CPHS\_RET** *cphs\_info\_num\_get\_max*(UBYTE \**max\_index*);

**Parameters:**

*max\_index* maximum count of information numbers

**Return:**

**CPHS\_OK** execution OK  
**CPHS\_FAIL** an error occurred: e.g. no information numbers cached  
**CPHS\_BUSY** CPHS module is busy  
**CPHS\_NOT\_INIT** CPHS module has not been initialised

**Description:**

Returns the maximum count of available information numbers.

## 3.15.3 AT command

### 3.15.3.1 %CPNUMS

**Table 11: %CPNUMS parameter command syntax**

Command	Possible response(s)
%CPNUMS=<element_id>,<mode>	%CPNUMS: <element_id>,<alpha tag>,<number>,<index_level>,<premium_flag>,<network_flag> +CME ERROR: <err>
%CPNUMS=?	list the whole table: %CPNUMS : <element_id>,<alpha tag>,<number>,<index_level>,<premium_flag>,<network_flag> +CME ERROR: <err>

**Description**

This set command has 2 modes: exploring and querying. Exploring is only allowed for elements of type folder. Exploring returns the elements belonging to folder having id "element\_id" (To be able to start, an extra element ROOT is here defined with element\_id 0. It is of type folder). Querying element returns information related to element having id "element\_id".

Test command queries a list of all entries to be found on the SIM.

### Defined values

<element\_id>: integer type value indicating:

Each information number entry on the SIM gets a unique Id from the CPHS module.

0 – default Id for element ROOT (to be used for getting the first elements: exploring ROOT)

<mode>: integer type value indicating:

1 – Exploring element (only if element is a folder): returns elements belonging to folder.

2 – Querying element: returns information related to element.

<alpha\_tag>: string type value indicating:

alpha tag of element

<number>: string type value indicating:

telephone number of element (empty string if element is a folder)

<index\_level>: integer type value indicating:

index level of element. The elements belonging to ROOT have index level 1.

<premium\_flag>: integer type value indicating:

0 – Premium flag is not set for element.

1 – Premium flag is set for element.

<network\_flag>: integer type value indicating:

0 – Network specific flag is not set for element.

1 – Network specific flag is set for element.

## 3.15.4 ACI/MFW functional interface

### 3.15.4.1 qAT\_PercentCPNUMS

**Prototype:**

**T\_ACI\_RETURN** tAT\_PercentCPNUMS(T\_ACI\_CMD\_SRC *srcId*);

**Parameters:**

**void**

**Return:**

**AT\_CMPL**      successfully completed  
**AT\_FAIL**      an error occurred

**Description:**

Queries whole list.

### 3.15.4.2 sAT\_PercentCPNUMS

**Prototype:**

**T\_ACI\_RETURN** sAT\_PercentCPNUMS(T\_ACI\_CMD\_SRC *srcId*, UBYTE *element\_index*,  
T\_CPHS\_CPNUMS\_MODE *mode*);

**Parameters:**

*element\_index*    index of element to be explored  
*mode*              exploring (only for folders) or querying

**Return:**

**AT\_CMPL**      successfully completed  
**AT\_FAIL**      an error occurred

**Description:**

Explore folder if mode is exploring, otherwise queries element information.

**3.15.4.3 rAT\_PercentCPNUMS**

**Prototype:**

**void rAT\_PercentCPNUMS (UBYTE *element\_index*, UBYTE *index\_level*, CHAR \**alpha\_tag*,  
CHAR \**number*, BOOL *premium\_flag*, BOOL *network\_flag*);**

**Parameters:**

<i>element_index</i>	index of element
<i>index_level</i>	index level of element (starts with 1)
<i>alpha_tag</i>	alpha tag of element
<i>number</i>	telephone number of element
<i>premium_flag</i>	premium flag for element (should it be charged with premium price?)
<i>network_flag</i>	network flag for element (is it network specific?)

**Return:**

**void**

**Description:**

For n elements contained in an explored folder, this function will be called n times so that ATI/MFW knows what elements are included in a given folder.  
If element was queried then function will be called once: it will contain the information related to this phone number.

### 3.15.5 MSC

[CPHS Get Information Numbers]


Ex: Example here is the one presented in CPHS recommendation B 4.6.1 - Figure 2.

```
AT%CPNUMS=0,1      lists elements from root.
%CPNUMS: 1,"TRAVEL","",1,0,0
%CPNUMS: 8,"WEATHER","",1,0,0
%CPNUMS: 11,"ENTERTAINMENT","",1,0,0
OK
```

```
AT%CPNUMS=9,1      (Note: 9 is no Folder: Error)
ERROR
```

```
AT%CPNUMS=9,2
%CPNUMS: 9,"North","323",2,0,0
OK
```

```
AT%CPNUMS=?
%CPNUMS: 1,"TRAVEL","",1,0,0
%CPNUMS: 2,"TAXIS","",2,0,0
%CPNUMS: 3,"Computercabs","111",3,0,0
%CPNUMS: 4,"Dial-a-cab","132",3,0,0
%CPNUMS: 5,"AIRPORTS","",2,0,0
%CPNUMS: 6,"Heathrow","345",3,0,0
%CPNUMS: 7,"Gatwick","651",3,0,0
%CPNUMS: 8,"WEATHER","",1,0,0
%CPNUMS: 9,"North","323",2,0,0
%CPNUMS: 10,"South","597",2,0,0
%CPNUMS: 11,"ENTERTAINMENT","",1,0,0
%CPNUMS: 12,"Ticketmaster","562",2,0,0
OK
```

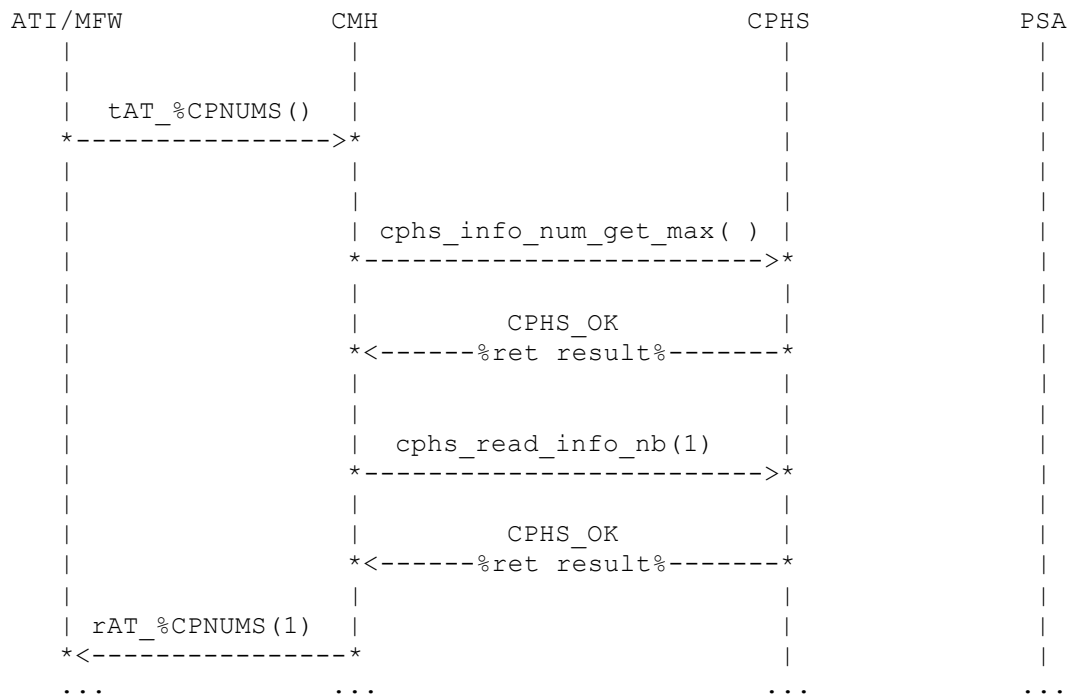

```
AT%CPNUMS=8,1      lists elements from "WEATHER"
%CPNUMS: 9,"North","323",2,0,0
%CPNUMS: 10,"South","597",2,0,0
OK
```

Version 006                      Texas Instruments Proprietary Information – Strictly Private                      46



```
*<-----*
|          |
|    AT_CMPL    |
|<--%ret result%--*
|          |
```

```
|
|
|
|
|
|
```